




Floor heating controls

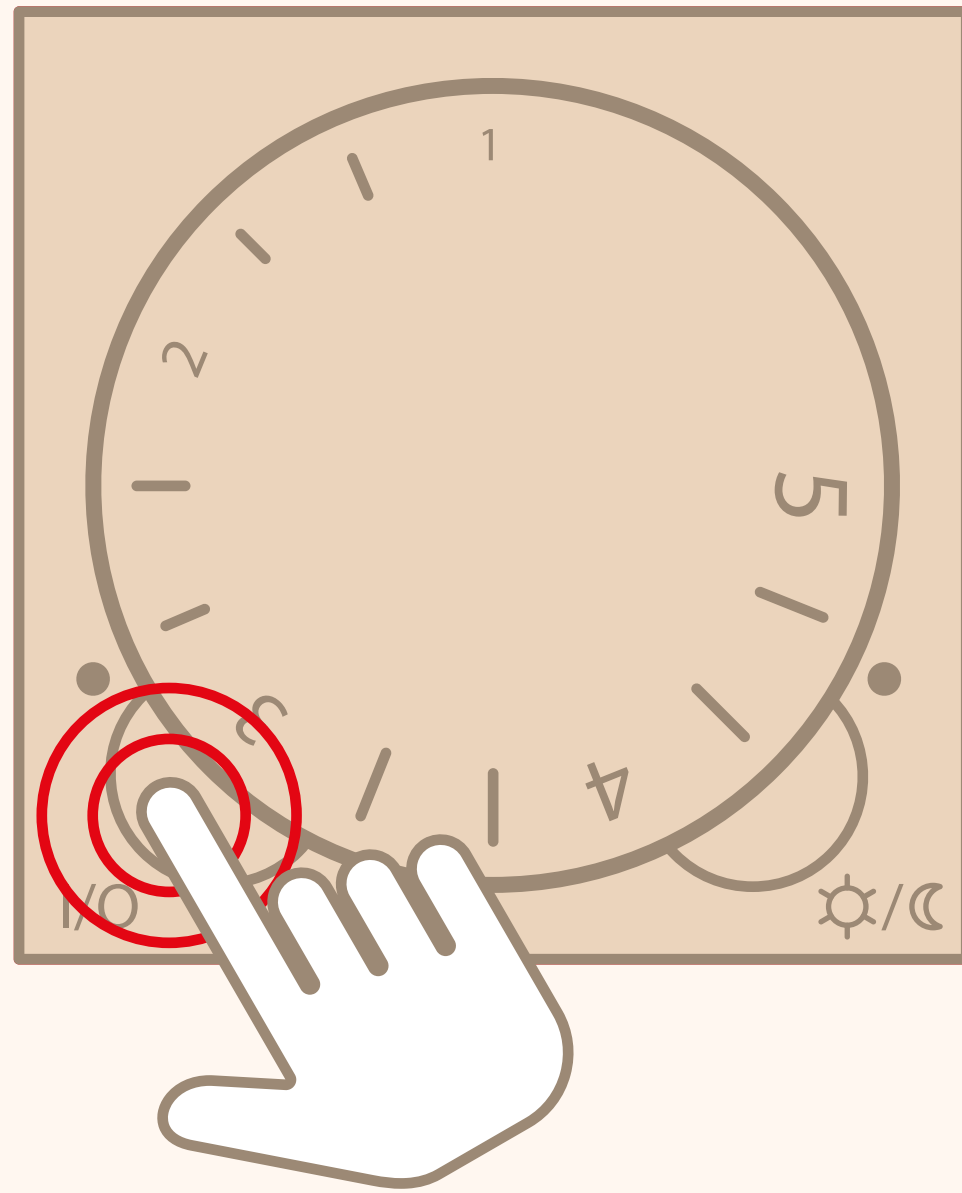

By pressing the I/O button, you can activate the floor heating.

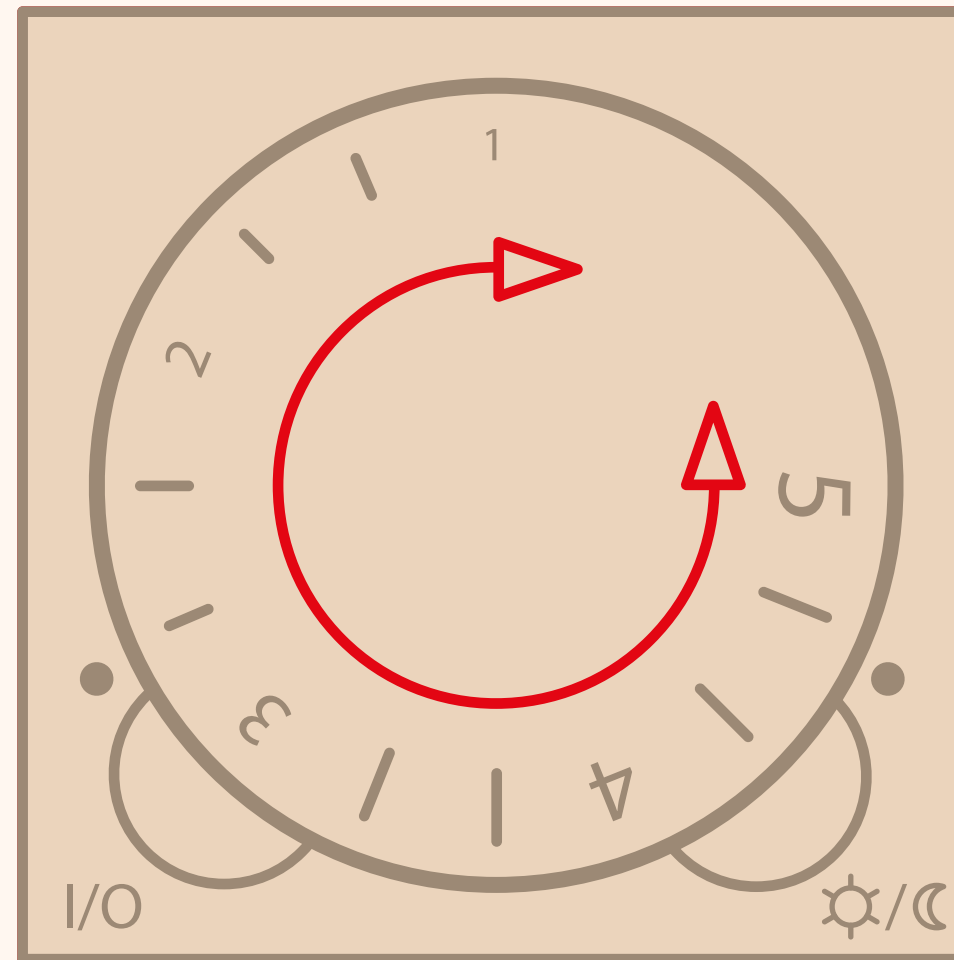

By rotating the circular selector, you can increase or decrease the floor heating intensity.

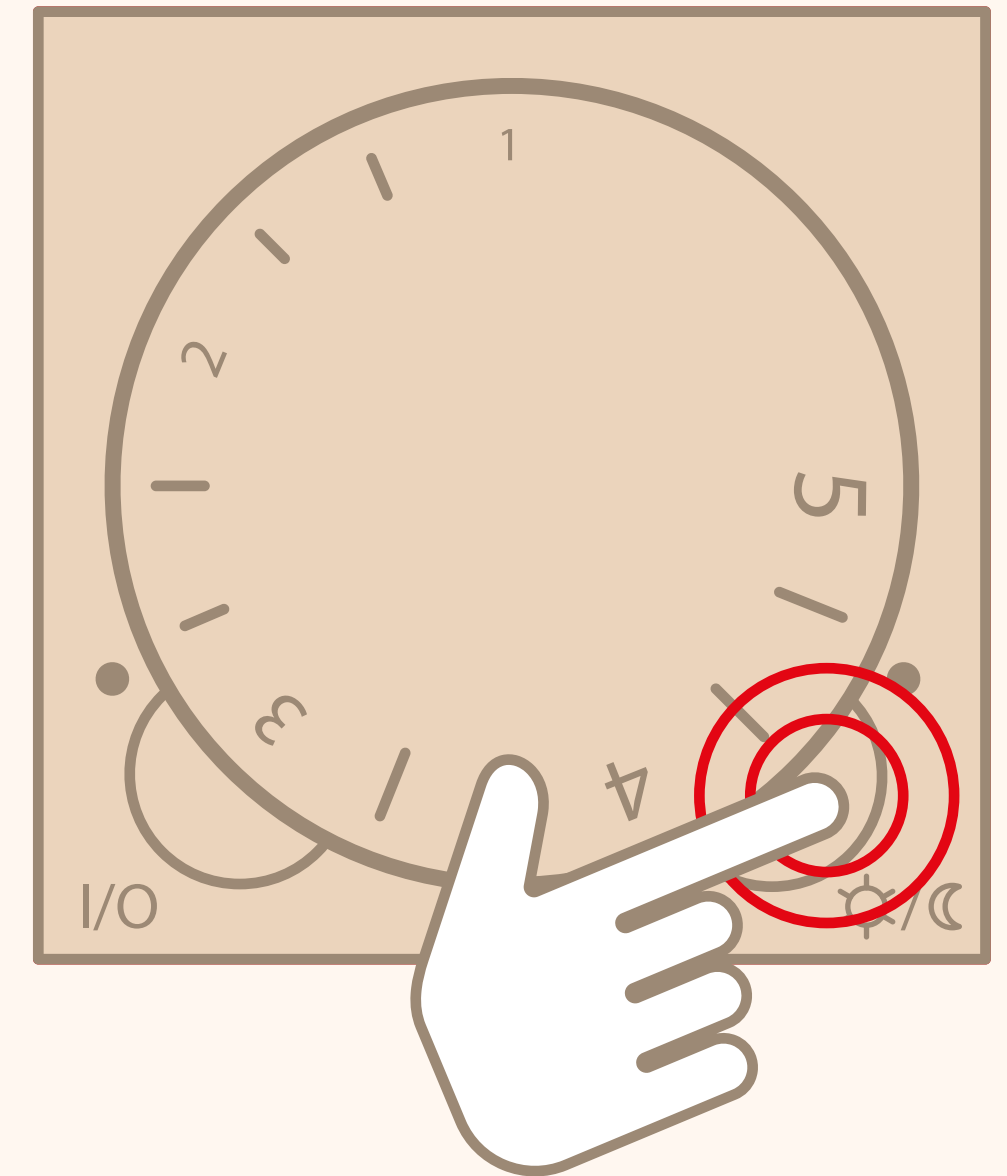

By pressing the ☀/☾ you can select the day/night heating mode.