
Recuperation controls

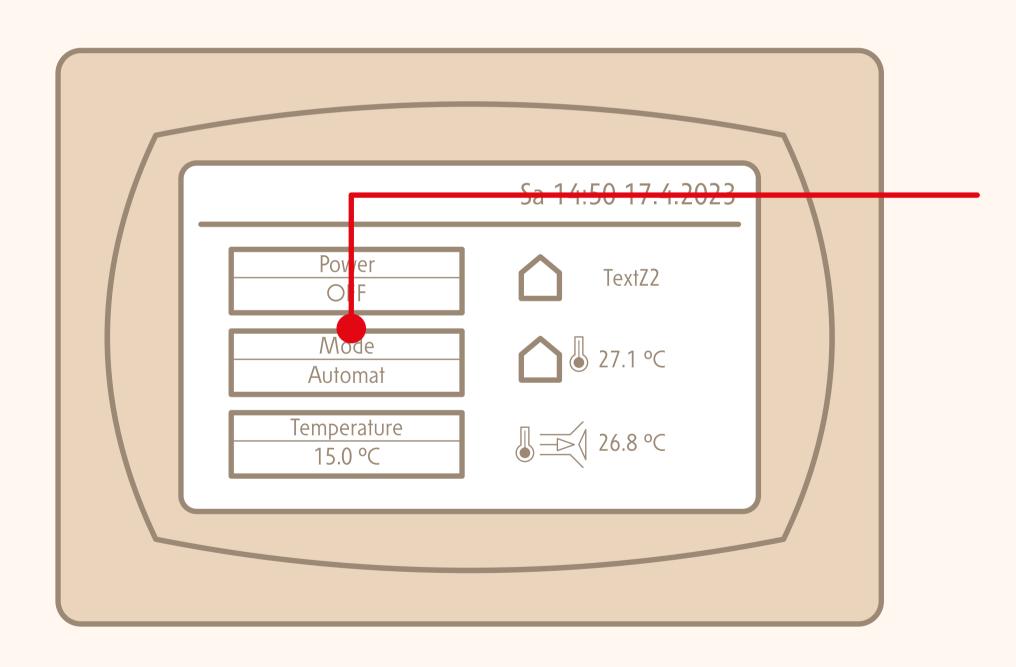

Recuperation is set to Automatic mode by default and there is no need to change it.