

# Windows controls



Windows controls are activated by tapping the display or home icon.



By dragging finger over the big windows icons, you can select controls for specific window or all the windows.



By dragging finger over the bottom control bar, you can open or close the window continuously.



By clicking the icon in bottom left corner, you can close the window entirely.



By clicking the icon in bottom right corner, you can open the window entirely.



By selecting the big icon „Všetchna okna (all the windows)“ and using the corner icons, you can control all the windows at once.